


DOT POP RANGE


ANTI-SNAG P-CLIP INSTALLATION INSTRUCTIONS

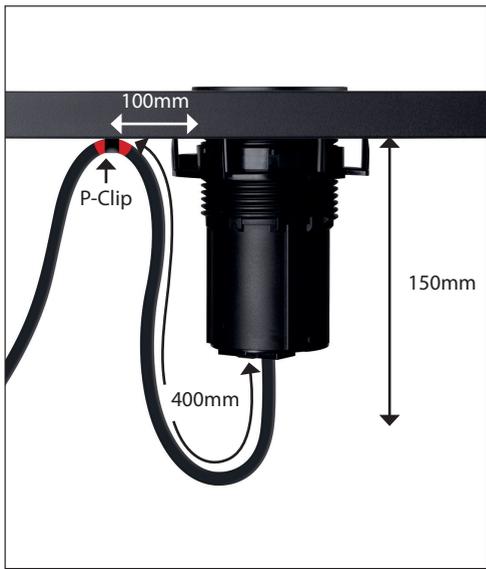

Step 1

The P-Clip installation is essential to the units safe and proper operation and must always be installed to dampen/slow down the upward movement of the unit.

Position the P-Clip around the cable, in the centre of the red heatshrink and screw it to the underside of the desktop surface approx. 100mm from the 80mm diameter cut-out edge.

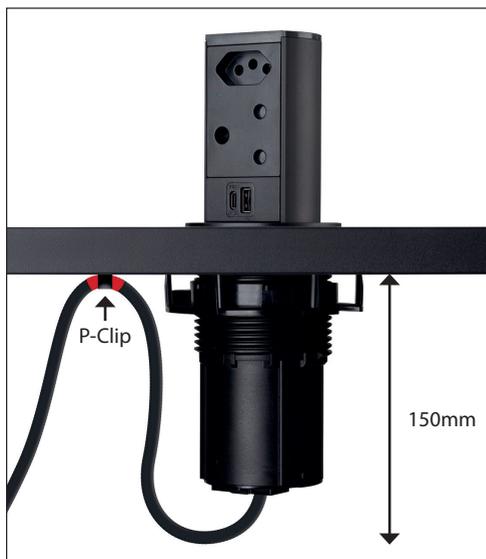

Step 2

Check the cable when the unit is popped up to ensure there is no interference and allows enough slack.

Allow at least 150mm clearance under the desktop surface.